

A CIRCUIT-THEORETIC ANOMALY RESOLVED BY NONSTANDARD ANALYSIS

A. H. Zemanian

Abstract — An anomaly in circuit theory is the disappearance of some of the stored energy when two capacitors, one charged and the other uncharged, are connected together through resistanceless wires. Nonstandard analysis shows that, when the wires are taken to have infinitesimally small but nonzero resistance, the energy dissipated in the wires equals that substantial amount of energy that had disappeared, and that all but an infinitesimal amount of this dissipation occurs during an infinitesimal initial time period. This provides still another but quite simple model of what is in fact a multifaceted physical phenomenon. It also exemplifies the efficacy of at least one application of nonstandard analysis to circuit theory.

Key Words: Capacitive circuits, capacitive energy anomaly, nonstandard circuit analysis

1 Where Did the Energy Go?

A much-discussed anomaly concerning the flow of energy in purely capacitive networks with switches and resistanceless wires is illustrated perhaps in its simplest form by the circuit of Figure 1. Here, two capacitors of equal capacitance $c > 0$ are initially disconnected from each other during time $t < 0$ because of an open switch. Let the charge on the left-hand capacitor be of constant value $q_0 = q_1(t)$ and the charge on the right-hand capacitor be $0 = q_2(t)$ for $t < 0$. Thus, during that time, $v_0 = q_0/c$ is the voltage on the left-hand capacitor, and the total stored energy in the circuit is $q_0 v_0/2$. With the switch being thrown closed at $t = 0$, the charge on each capacitor becomes $q_0/2$, and the total stored energy

becomes $q_0v_0/8 + q_0v_0/8 = q_0v_0/4$. Energy in the amount of $q_0v_0/4$ has disappeared. Where did it go?

2 No Problem When the Circuit Has Resistance

Assume that the wires have some resistance $r > 0$, as shown in lumped fashion in Figure 2. Then, the disappearing energy is accounted for by dissipation in r . Indeed, for $t > 0$, the current $i_r(t)$ in the circuit is

$$i_r(t) = \frac{q_0}{rc} e^{-2t/rc}, \quad (1)$$

and the corresponding power $p_r(t) = i(t)^2 r$ is

$$p_r(t) = \frac{q_0^2 v_0}{rc} e^{-4t/rc}. \quad (2)$$

Hence, the total energy $E_r(0, \infty)$ dissipated in r is

$$E_r(0, \infty) = \int_0^\infty p_r(t) dt = \frac{q_0^2 v_0}{4} \quad (3)$$

This is exactly the difference between the initial capacitively stored energy $q_0v_0/2$ and the final capacitively stored energy $q_0v_0/4$ occurring in the limit as $t \rightarrow \infty$.

3 Standard Distribution Theory Does Not Help

Perhaps we can account for the discrepancy noted in Section 1 by using standard distribution theory. After all, as $r \rightarrow 0$, $i_r(t)$ approaches $\delta(t)q_0/2$, a delta function of size $q_0/2$. Indeed, for each $r > 0$, $i_r(t) = 0$ for $t < 0$ and $\int_0^\infty i_r(t) dt = q_0/2$, whereas $\int_{t>T} i_r(t) dt \rightarrow 0$ for every $T > 0$ as $r \rightarrow 0$. So, why not use this delta function in the first place, assume r is not zero (perhaps it is a nonzero infinitesimal), and calculate the energy dissipation in r as follows:

$$\int_{-\infty}^\infty (i_r(t))^2 r dt = \frac{q_0^2}{4} r \int_{-\infty}^\infty (\delta(t))^2 dt = ?$$

Unfortunately δ^2 is not well-defined as a distribution. Singular distributions cannot be multiplied together, according to standard distribution theory.¹ It appears that the difficulty of Section 1 persists if we try this approach.

¹However, nonstandard generalized functions may circumvent this trouble in multiplication; in this regard, see the Final Remark in Section 7.

4 More Complicated Models Can Account for the Vanishing Energy

One can set up in the laboratory the circuit of Figure 1 using real components and can note that the discrepancy between the initial and final stored energies truly occurs. One must conclude that the ideal circuit of Figure 1 with perfect elements is too simplified to account for the real phenomenon. The vanishing stored energy might be accounted for in several ways. There is indeed some resistance in any wire, which will dissipate energy. The dielectric within the capacitors has nonlinear resistance as well, producing more dissipation. The current produces a magnetic field and thereby inductance, which will affect the transient state and thereby the resistive power dissipation over time. There may be arcing at the switch as it is being closed, producing thereby more heat. Moreover, the varying electric fields in the capacitors produce magnetic fields and thereby radiation. A search on the internet² yields a number of references discussing all this, some examples of which are [1], [2], [3], [6]. Some of that discussion occurs as internet “chat.”

So, a variety of different models are suggested by this multifaceted physical phenomenon. Which model is preferred depends upon a compromise between accuracy and simplicity. The objective of this brief note is to suggest one more, but quite simple, model. It uses nonstandard analysis to extend the rc circuit of Figure 2 to the case where r is a positive infinitesimal, a quantity that is less than any real positive number but is not negative, and thus is effectively zero from the perspective of standard analysis. Another purpose of the note is to demonstrate the efficacy of nonstandard analysis in circuit theory and perhaps encourage its use in other engineering analyses.

5 How Nonstandard Analysis is Used in This Case

Up to now, we have tacitly restricted all our variables and parameters to real numbers. We will continue to take the capacitance c and the initial charge q_0 and voltage $v_0 = q_0/c$ as fixed real positive numbers. But, we will allow all other quantities to be nonstandard,

²For instance, search “capacitance energy loss” in google or yahoo.

namely hyperreal numbers—with real numbers being a special case of hyperreal numbers.³ The hyperreals comprise the enlargement ${}^*\mathbf{R}$ of the real line \mathbf{R} . ${}^*\mathbf{R}_+$ and \mathbf{R}_+ denote the positive parts of ${}^*\mathbf{R}$ and \mathbf{R} . Each real $a \in \mathbf{R}$ is contained in a set of hyperreals that are infinitesimally close to a . That set is called the halo—or synonymously the monad—for a . Moreover, for any two reals a and b where $a < b$, the halos for a and b do not overlap. Furthermore, the hyperreal line ${}^*\mathbf{R}$ extends into unlimited (synonymously, infinitely large) hyperreals.

Here is how these ideas can be used to resolve the anomaly. Instead of setting r exactly equal to 0, we can let r be a positive infinitesimal in Figure 2. It can then be shown that, at each real positive time t , the current $i_r(t)$ and power $p_r(t)$ dissipated in r are infinitesimals. On the other hand, it can be shown that, at all sufficiently small positive infinitesimal time t , the current $i_r(t)$ and power $p_r(t)$ are positive unlimited hyperreals. It can also be seen that the total energy $E_r(0, \infty)$ dissipated in the positive infinitesimal r during the real time interval $0 \leq t < \infty$ is equal to the real value $q_0 v_0 / 4$, and this is so no matter how small this infinitesimal r is chosen. No longer does that dissipated energy disappear—as it did under standard analysis with $r = 0$. Moreover, it can be seen that the energy $E_r(\tau, \infty) = \int_{\tau}^{\infty} p_r(t) dt$ dissipated in the infinitesimal r during the real time interval $\tau \leq t < \infty$, where τ is any real positive time, is also infinitesimal. Consequently, we can assert that the energy dissipated in r during the positive part of the time halo around $t = 0$ is infinitesimally close to $q_0 v_0 / 4$. Done.

6 The Details

To explicate all of this, we invoke a few results from nonstandard analysis. There have been many expositions of that theory during the 45 years since its inception [7]. The book [4] lists 41 such sources appearing before 1998, and [4] is itself a well-written introduction to the subject. A concise listing and explanation of the ideas used herein can be found in [8, Appendix A]. We shall now present derivations of the thoughts of the preceding section and will refer to [8, Appendix A] for certain definitions and results of nonstandard analysis.

³As is conventional, we will simply write “hyperreal” for “hyperreal number” and “real” for “real number.”

As above, \mathbf{R} and ${}^*\mathbf{R}$ denote the real and hyperreal lines respectively [8, Appendix A.5], and \mathbf{R}_+ and ${}^*\mathbf{R}_+$ denote their positive parts. Also, $\mathbf{N} = \{0, 1, 2, \dots\}$ denotes the set of natural numbers. $\langle a_n \rangle$ will denote a sequence of real numbers $a_0, a_1, \dots, a_n, \dots$ indexed by the natural numbers. One way (but not the only way) of introducing the hyperreals is to define them as equivalence classes of sequences of real numbers. To specify that equivalence relation, we choose a nonprincipal ultrafilter \mathcal{F} . This is a set of subsets of \mathbf{N} satisfying certain conditions [8, Appendix A.4]. Two sequences $\langle a_n \rangle$ and $\langle b_n \rangle$ are taken to be equivalent if $\{n \in \mathbf{N} : a_n = b_n\} \in \mathcal{F}$. A hyperreal will be denoted by $[a_n]$, where the a_n are the elements of one (i.e., any one) of the sequences in the equivalence class. Thus, if $\langle a_n \rangle$ and $\langle b_n \rangle$ are equivalent sequences, then $[a_n]$ and $[b_n]$ denote the same hyperreal (i.e., $[a_n] = [b_n]$). Each hyperreal is either positive (i.e., $\{n : a_n > 0\} \in \mathcal{F}$), or negative (i.e., $\{n : a_n < 0\} \in \mathcal{F}$), or 0 (i.e., $\{n : a_n = 0\} \in \mathcal{F}$). Only one of these conditions will hold [8, Appendix A.6].

An infinitesimal $[a_n]$ is a special kind of hyperreal defined as follows. If for every $x \in \mathbf{R}_+$ we have $\{n : |a_n| < x\} \in \mathcal{F}$, then $[a_n]$ is an infinitesimal. Similarly, if for every $x \in \mathbf{R}_+$ we have $\{n : |a_n| > x\} \in \mathcal{F}$, then $[a_n]$ is called an unlimited hyperreal (synonymously, an infinitely large hyperreal). If $[a_n]$ is neither infinitesimal nor unlimited, it is called appreciable. The product of an unlimited hyperreal and an appreciable hyperreal is an unlimited hyperreal. We emphasize that these definitions do not depend upon the choice of the representative sequence $\langle a_n \rangle$ for $[a_n]$; this is consequence of the properties of the nonprincipal ultrafilter \mathcal{F} .

Now, let $r = [r_n]$ be a positive infinitesimal. Consider Figure 2 with r replaced by r_n . Then, for any natural number n for which $r_n > 0$ and for any $t \in \mathbf{R}_+$, the current $i_{r_n}(t)$ is given by (1) and the power dissipated in r_n is given by (2), but with r replaced by r_n of course.

We shall now show that the hyperreal power $p_r(t) = [p_{r_n}(t)]$ is infinitesimal at each $t \in \mathbf{R}_+$. Remember that r_n and $p_{r_n}(t)$ are both real positive numbers. Given any $t \in \mathbf{R}_+$ and given any $\epsilon \in \mathbf{R}_+$, there exists a $\rho \in \mathbf{R}_+$ such that $r_n < \rho$ implies that $p_{r_n}(t) < \epsilon$.

Thus,

$$\{n: p_{r_n}(t) < \epsilon\} \supseteq \{n: r_n < \rho\} \quad (4)$$

But, $\{n: r_n < \rho\} \in \mathcal{F}$ because $[r_n]$ is infinitesimal. By the properties of an ultrafilter (in this case, any filter) [8, Appendix A.4], it follows that $\{n: p_{r_n}(t) < \epsilon\} \in \mathcal{F}$, and this is so for every $\epsilon \in \mathbf{R}_+$. So truly, $[p_{r_n}(t)]$ is infinitesimal.

In a similar way, it can be shown that the hyperreal current $i_r(t) = [i_{r_n}(t)]$ is infinitesimal for each $t \in \mathbf{R}_+$.

Furthermore, $p_r(t) = [p_{r_n}(t)]$ can be shown to be positive unlimited for every sufficiently small infinitesimal time $t = [t_n]$ by examining sets in \mathcal{F} as above. But, let us now use a somewhat more concise argument. For $r = [r_n]$ being a positive infinitesimal, $[q_0 v_0 / r_n c]$ is a positive unlimited hyperreal. On the other hand, if the infinitesimal time $t = [t_n] \in {}^*\mathbf{R}_+$ is chosen so small that $t < r$, then $[e^{-4t_n/r_n c}]$ is appreciable, being larger than $e^{-4/c} \in \mathbf{R}_+$ and less than 1. (To do this, just choose the t_n such that $\{n: t_n/r_n < 1\} \in \mathcal{F}$. Now, $p_r(t) = [p_{r_n}(t)]$ is the product of the unlimited $[q_0 v_0 / r_n c]$ and the appreciable $[e^{-4t_n/r_n c}]$ and therefore must be positive unlimited.

Again, in the same way we can show that the hyperreal current $i_r(t) = [i_{r_n}(t)]$ is also positive unlimited for all sufficiently small infinitesimal $t = [t_n]$.

Consider now the energy $E_{r_n}(\tau, \infty)$ dissipated in $r_n \in \mathbf{R}_+$ from real time $t = \tau \in \mathbf{R}_+$ to $t = \infty$.

$$E_{r_n}(\tau, \infty) = \int_{\tau}^{\infty} p_{r_n}(t) dt = \frac{q_0 v_0}{4} e^{-\tau/r_n c}$$

Again an argument similar to that given for $p_r(t) = [p_{r_n}(t)]$ (see the argument regarding (4)) shows that the hyperreal energy $E_r(\tau, \infty) = [E_{r_n}(\tau, \infty)]$ dissipated in the infinitesimal resistor $r = [r_n]$ from τ to ∞ is also infinitesimal, whatever be the choice of $\tau \in \mathbf{R}_+$. More particularly, for any hyperreal $t = [t_n] > \tau \in \mathbf{R}_+$ (possibly, t is positive unlimited), the hyperreal energy

$$E_r(\tau, t) = \left[\int_{\tau}^t p_{r_n}(x) dx \right]$$

remains infinitesimal and less than $E_r(\tau, \infty)$ no matter how large the hyperreal time $t = [t_n]$ is chosen.

Since all these results hold for every $\tau \in \mathbb{R}_+$, we can interpret them as follows: *The total hyperreal energy dissipated in the infinitesimal resistance $r = [r_n]$ during the real time interval from 0 to τ is infinitesimally close to (but less than) the real value $q_0 v_0/4$, and this is so no matter how small we choose $\tau \in \mathbb{R}_+$. On the other hand, that infinitesimal difference in the energy is dissipated in $r = [r_n]$ during all time larger than $\tau \in \mathbb{R}_+$, again no matter small τ is.* Thus, we see that by using an infinitesimal resistor r , we have a way of accounting for all of the initial energy.

7 Conclusions

This solves—by means of nonstandard analysis—the “mystery of the vanishing energy” in the following way: From the perspective of standard mathematics, the infinitesimal resistance r is equivalent to zero resistance because it is less than any real positive resistance but not negative. Nonetheless, all but an infinitesimal part of the missing appreciable energy $q_0 v_0/4$ is found as dissipation in the infinitesimal r due to the infinitely large, hyperreal, power dissipation $p_r(t)$ occurring during some initial positive part of the time halo at $t = 0$. The remaining infinitesimal part of that missing energy occurs as infinitesimal power dissipation occurring during all subsequent hyperreal time.

A Final Remark: The “solution” being proposed here may not be the only nonstandard way of accounting for the anomaly. Effectively, our solution it is saying that, since there is no anomaly when the resistor r is positive, there should be no anomaly when r is infinitesimally small but positive (a reflection of the transfer principle of nonstandard analysis [8, Appendix A.22]). But, one cannot jump to the limit as $r \rightarrow 0$ because the anomaly then jumps into view. Perhaps there are other nonstandard solutions available. For instance, perhaps the newer theories concerning the multiplication of distributions coupled with nonstandard analysis and that justify the square δ^2 of the delta function δ multiplied by an infinitesimal r may be used to account for the vanishing energy at the instant $t = 0$. See, for example, [5, Section 23].

References

- [1] S.M. Al-Jaber and S.K. Salih, Energy consideration in the two-capacitor problem, *Eur. J. Phys.*, vol. 21, pp, 341-345, 2000.
- [2] M. Andelman and W.L. Warren, Energy recovery schemes for the flow through capacitor technology (preprint—available via email: dragonfly@flowtc.com).
- [3] J. Foutz, Energy loss in charging a capacitor, SMPS Technology, Alta Loma, CA, March 2004
- [4] R. Goldblatt, *Lectures on the Hyperreals*, New York, Springer, 1998.
- [5] M. Oberguggenberger, *Multiplication of Distributions and Applications to Partial Differential Equations*, Harlow, England, Longman Scientific & Technical, 1992.
- [6] C. Parton, Conservation and capacitance, *Phy. Educ.*, vol. 23, p. 138, 1990.
- [7] A. Robinson, *Non-standard Analysis*, Amsterdam, North-Holland Publishing Co., 1970.
- [8] A.H. Zemanian, *Graphs and Networks: Transfinite and Nonstandard*, Boston, Birkhauser, 2004.

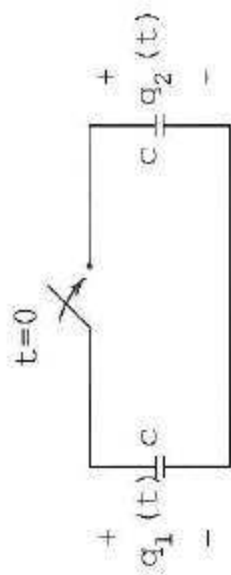


Figure 1

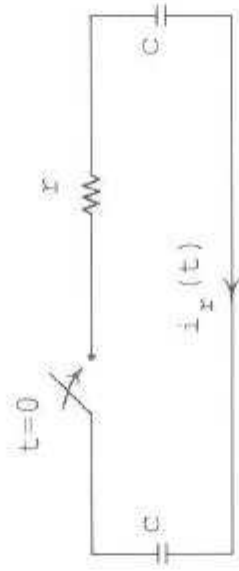


Figure 2